



AutoPilot® 3 Demo Instructions

The CD-ROM that ships with ARC-16 orders includes an unlicensed copy of AutoPilot 3 software for demo use. It allows users to log in over an Internet connection to an actual ARC-16 at Burk Technology's facility in Littleton, Massachusetts. If you do not have a CD with AutoPilot on it, you can download a copy from the Burk Technology web site to log into the demo.

These instructions are for users who are accessing the ARC-16 at Burk Technology's demo site. **If you already purchased AutoPilot for use with your own ARC-16, follow the instructions in the AutoPilot manual for setup and operation.**

What can AutoPilot do for me?

AutoPilot 3 provides PC-based control, monitoring and logging of an unlimited number of ARC-16 sites, and allows macros and scripting for automatic functions such as power and pattern changes, switching to backup equipment, power failure recovery, antenna monitoring, and more. Email and SMS alarm notifications make it easy to stay up-to-date via cell phone, PC, PDA, or any other email-enabled device. You can even use AutoPilot to control multiple sites simultaneously – which is useful in multi-tower arrays or if you need to switch from a primary transmitter to an offsite backup transmitter. The logging and report writing functions allow you to automatically log data from any number of ARC-16 sites, and to create reports for your own review and for FCC logging requirements.

How do I get started with the demo?

It should only take a few minutes to install the software and log in to AutoPilot and the Burk Technology demo site. Your PC will need Internet access.

1. To use the AutoPilot demo, install the software by inserting the CD-ROM (or double-clicking the icon after you download the application). Follow the instructions on your screen to complete installation. When prompted for a program key, enter a string of 14 0s.
2. After you complete installation, go to the Start menu and run the program. When you are prompted to log in, the default user name is Administrator. Leave the password field empty. Click Login to begin. After you log in, the demo site is displayed in the AutoPilot main window.
3. Before connecting to the site, you will need to customize the connection setting for your computer and modem. Click **Edit Connections** in the Site menu. When the connections dialog opens, click on the Demo Site connection. Select the **Web Interface** option and enter a host name of **apdemo.burk.com**. Click **Save** when you are done, and close the Connections dialog.
4. Click the **Connect** icon in the toolbar (the second icon from the left) to dial the Burk Technology demo unit. When your PC establishes a connection to the site,

the meters and status indicators will display the channel values at the demo site, and you can issue commands and take control of the ARC-16 site.

If you have trouble connecting to the site, please contact Customer Support at 978-486-3711.

Now that you have set up AutoPilot and you are logged into the demo site, please see the AutoPilot instruction manual for detailed information on all of the available control, monitoring, logging and scripting functions. The manual is available on the Burk Technology web site and included on the CD-ROM version of the software.

How do I get a licensed copy of AutoPilot for my own ARC-16 system?

The free program key we provide for demo use allows connection to Burk Technology's demo site only. If you would like to purchase AutoPilot for use with your own ARC-16 system, please contact us at 800-255-8090 or email sales@burk.com.