



## G-Link Installation Notice

Many G-Link™ units default to the same unit number. As a result, installing more than one unit at the same site will cause a conflict if the unit number has not been changed from its default.

It is recommended that you connect each G-Link unit to the G-Bus network one at a time and change the unit number before installing the next unit. Detailed instructions on installing and configuring each G-Link product can be found in the corresponding User Manual.

The default unit numbers are as follows.

<b>G-Link Unit</b>	<b>Default Unit Number</b>
AC-4	15
AC-8	15
GT-4	15
GX-128	8-15*

*\*In its default configuration, the GX-128 will appear on the G-Bus network as eight separate units. The starting unit number determines the maximum number of virtual units available.*