



### **GSC3000/VRC2500 PARTS NOTICE**

The DB37 hood and soldercups pictured in the “Unpacking” section of the GSC3000/VRC2500 Installation and Operation Manual are only required if wiring equipment directly to the GSC3000 I/O unit or VRC2500 without using the Wiring Interface or Command Relay. The DB37 hood and soldercups are not included in the shipment, but are available on request.

DOC43A003 REV A