



Technical Bulletin:

Migrating files from AutoPilot® Plus to AutoPilot® 2010

Provides detailed instructions for migrating settings, Custom Views, reports, etc for customers upgrading from AutoPilot Plus to AutoPilot 2010.

July 2010

BURK
TECHNOLOGY

Migrating Files

To conform to Windows software best practices, AutoPilot 2010 stores your files in a location different from that used by AutoPilot Plus. After upgrading to AutoPilot 2010, use the procedure described below to migrate your files.

1. Install AutoPilot 2010 if you have not done so already. You do **not** need to uninstall AutoPilot Plus, but may do so if you prefer (uninstalling will not remove your files).
2. Run and then close AutoPilot 2010. This allows the software to create the folders that you will copy files into.
3. Copy the desired files from the AutoPilot Plus folder to the AutoPilot 2010 folder (see below).
4. Start AutoPilot 2010 and verify that your files and settings have been correctly migrated.

AutoPilot Files

Note: The list below uses Windows system path variables, as the exact location of a folder may differ from one computer to the next. You can open a folder using a path variable by typing the path into the Run dialog from the Start menu.

Site settings:

Copy from: %ProgramFiles%\Burk Technology\AutoPilot Plus\Settings\Networks.xml
Copy to: %AllUsersProfile%\Burk Technology\AutoPilot 2010\Settings\Networks.xml

Network devices:

Copy from: %ProgramFiles%\Burk Technology\AutoPilot Plus\Settings\NetworkDevices.xml
Copy to: %AllUsersProfile%\Burk Technology\AutoPilot 2010\Settings\NetworkDevices.xml

Subordinate alarm settings:

Copy from: %ProgramFiles%\Burk Technology\AutoPilot Plus\Settings\SubordinateAlarms.xml
Copy to: %AllUsersProfile%\Burk Technology\AutoPilot 2010\Settings\SubordinateAlarms.xml

Incoming call settings:

Copy from: %ProgramFiles%\Burk Technology\AutoPilot Plus\Settings\IncomingCallSettings.xml
Copy to: %AllUsersProfile%\Burk Technology\AutoPilot 2010\Settings\IncomingCallSettings.xml

Logged data:

Copy from: %ProgramFiles%\Burk Technology\AutoPilot Plus\Databases\Log.mdb
Copy to: %AllUsersProfile%\Burk Technology\AutoPilot 2010\Databases\Log.mdb

Text logs:

Copy from: %ProgramFiles%\Burk Technology\AutoPilot Plus\Logs*.*
Copy to: %AllUsersProfile%\Burk Technology\AutoPilot 2010\Logs*.*

Custom Views:

Copy from: %ProgramFiles%\Burk Technology\AutoPilot Plus\Custom Views*.*
Copy to: %AllUsersProfile%\Burk Technology\AutoPilot 2010\Custom Views*.*

Reports:

Copy from: %ProgramFiles%\Burk Technology\AutoPilot Plus\Reports*.*
Copy to: %AllUsersProfile%\Burk Technology\AutoPilot 2010\Reports*.*

